

Angled Frame Conveyor

Supplementary Operating / Assembly Instructions

Table of contents

1.	General information	3
1.1	Manufacturer of the system.....	3
1.2	Introduction / purpose of the Operating / Assembly Instructions.....	3
1.3	Version.....	3
2.	Safety	4
2.1	Reasonably foreseeable misuse	4
3.	Mechanical design	5
3.1	Sidewalls	5
3.2	Side guide.....	5

1. General information

1.1 Manufacturer of the system

Robotunits GmbH
Dr. Walter Zumtobel Str. 2
A-6850 Dornbirn
Tel. +43 5572 22000 200
Fax +43 5572 22000 9200
www.robotunits.com

1.2 Introduction / purpose of the Operating / Assembly Instructions

The Operating and Assembly instructions for the Belt Conveyor must also be observed when installing, operating and servicing the Angled Frame Conveyor.

1.3 Version

Version	Type	Date
01	New document: Supplementary Operating / Assembly Instructions for Angled Frame Conveyors	2025-06-18

2. Safety

2.1 Reasonably foreseeable misuse

In particular, the following must be prevented:


- the removal of safety equipment
- reaching between the angled pulley and the conveyor belt or sidewalls during operation




- the removal and manipulation of the attachments

3. Mechanical design

3.1 Sidewalls

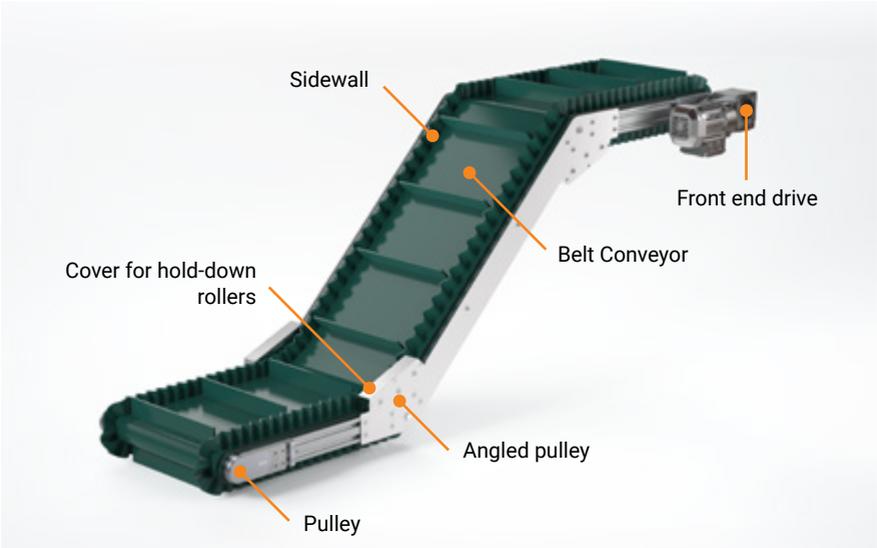

3.2 Side guide

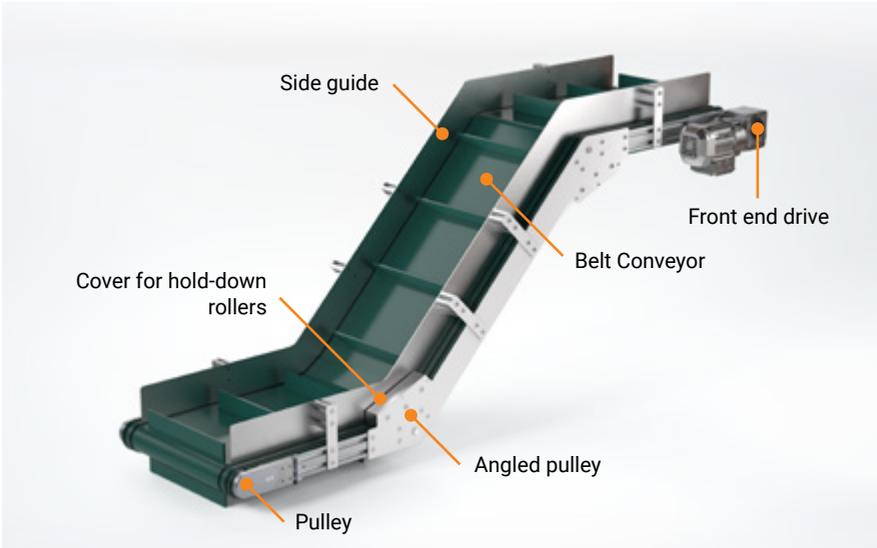



We reserve the right to alter technical specifications at any time.
We assume no liability for typesetting and printing errors.

Austria • Germany • Switzerland • Italy • France • Spain • Czech Republic • USA • Australia