

## Angled Frame Conveyor

Supplementary Operating / Assembly Instructions

# Table of contents

- 1.    **General information** ..... 3
  - 1.1   Manufacturer of the system..... 3
  - 1.2   Introduction / purpose of the Operating / Assembly Instructions..... 3
  - 1.3   Version..... 3
- 2.    **Safety**..... 4
  - 2.1   Reasonably foreseeable misuse ..... 4
- 3.    **Mechanical design**..... 5
  - 3.1   Sidewalls ..... 5
  - 3.2   Side guide..... 5

# 1. General information

## 1.1 Manufacturer of the system

Robotunits GmbH  
Dr. Walter Zumtobel Str. 2  
A-6850 Dornbirn  
Tel. +43 5572 22000 200  
Fax +43 5572 22000 9200  
www.robotunits.com

## 1.2 Introduction / purpose of the Operating / Assembly Instructions

The Operating and Assembly instructions for the Belt Conveyor must also be observed when installing, operating and servicing the Angled Frame Conveyor.

## 1.3 Version

Version	Type	Date
01	New document: Supplementary Operating Instructions for Angled Frame Conveyors	2025-06-18

## 2. Safety

### 2.1 Reasonably foreseeable misuse

**In particular, the following must be prevented:**


- the removal of safety equipment
- reaching between the angled pulley and the conveyor belt or side walls during operation




- the removal and manipulation of the attachments

### 3. Mechanical design

#### 3.1 Sidewalls

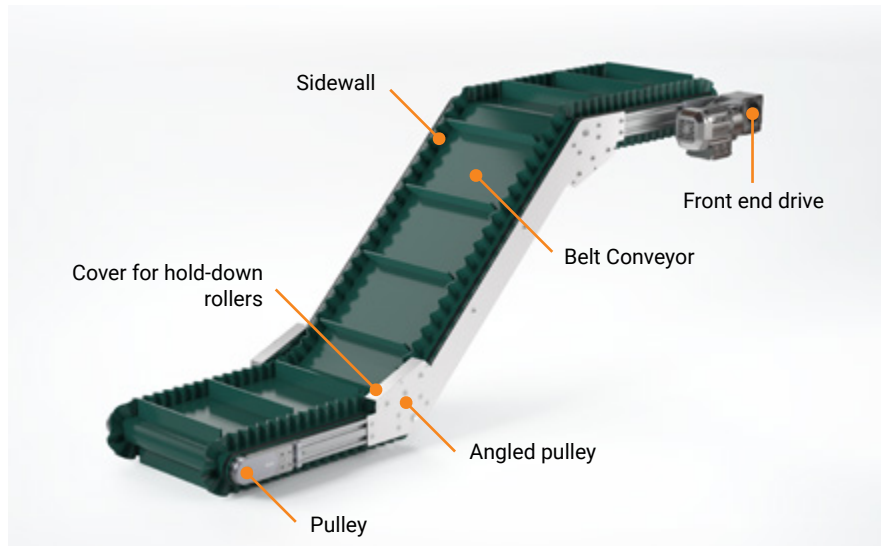

#### 3.2 Side guide

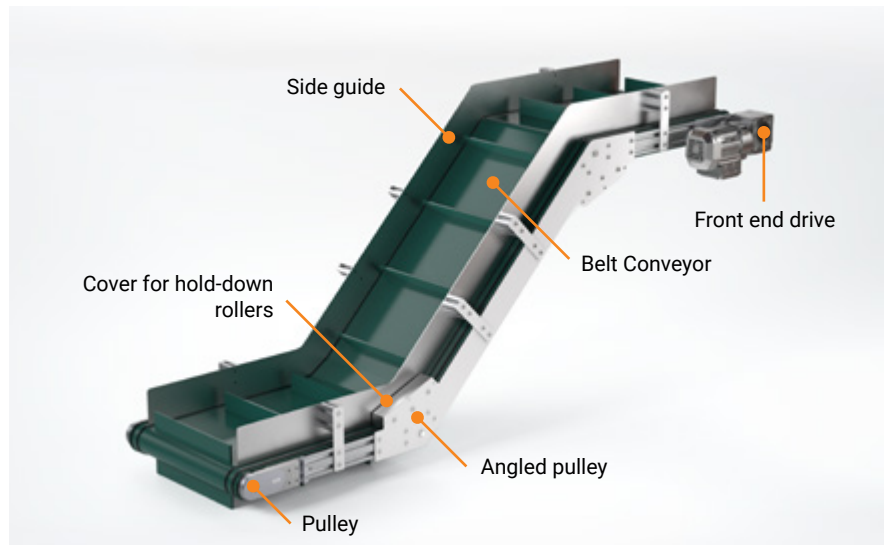



We reserve the right to alter technical specifications at any time.  
We assume no liability for typesetting and printing errors.

Austria • Germany • Switzerland • Italy • France • Spain • Czech Republic • USA • Australia

[www.robotunits.com](http://www.robotunits.com)