# CONTROLLER MIT ZPA-LOGIK STEUERUNG MIT EINER SIEMENS SPS





## Inhaltsverzeichnis

1.	Einleitung	. 2
2.	Vorbereitung des TIA Portals	. 3
3.	Hinzufügen eines Controllers	. 4
4.	Beispielprogramm	. 7



### 1. Einleitung

ZPA (Zero Pressure Accumulation) bedeutet staudrucklose Förderung. Der Controller (Modul) bietet diese Funktion, um völlig unabhängig von einer übergeordneten Steuerung eine staudrucklose Förderung zu realisieren.

Dazu wird jede Zone mit einem Zonensensor ausgestattet, welcher mit dem Controller verbunden wird. Der Controller erkennt mit Hilfe dieses Sensors, ob sich Fördergut in der Zone befindet. Ein Controller kann mit dem jeweils vor- bzw. nachgelagerten Controller kommunizieren. Dadurch wird gewährleistet, dass, sollte es in einer Zone zu einem Stopp eines Fördergutes kommen, die jeweils vorgelagerte Zone ebenfalls gestoppt wird, um eine Kollision zu vermeiden.

Obwohl diese Funktion völlig unabhängig betrieben werden kann, ist es möglich zusätzlich eine Verbindung zwischen einem oder mehreren ConveyLinxAi2 Module(n) und einer SPS herzustellen, um den Förderprozess zu beeinflussen bzw. Daten des Prozesses zu erfassen.

Nachfolgend wird gezeigt, wie die Verbindung zwischen einer Siemens SPS und einem vorkonfigurierten Controller (ConveyLinxAi2) hergestellt wird.

Dem Dokument ist ein Ausdruck der entsprechenden UDTs angehängt, aus welchen hervorgeht, welche Möglichkeiten zur Erfassung von Daten sowie zur Steuerung zur Verfügung stehen.



#### 2. Vorbereitung des TIA Portals

Nachdem ein neues Projekt angelegt oder ein bestehendes Projekt geöffnet und entsprechend der sonstigen Hardware angepasst wurde, muss einmalig eine GSD-Datei installiert werden. Diese Datei beinhaltet die logische Beschreibung der Hardware des Controllers. Die Datei ist unter

www.robotunits.com/de/produkt/rollenfoerderer/?tab=Downloads zu finden.

Durch Aufrufen des Pfades "Extras"  $\rightarrow$  "Gerätebeschreibungsdateien verwalten" im TIA Portal, wird die Datei unter Angabe des Quellpfades installiert.

Es steht eine UDT bereit, welche dem Projekt ebenfalls hinzugefügt werden sollte. Die Datei ist unter www.robotunits.com/de/produkt/rollenfoerderer/?tab=Downloads zu finden. Bitte fügen Sie dem Projekt die Datei wie folgt hinzu:

1. Projektnavigation: "[Name der SPS]" → "Externe Quellen" → "Neue Datei hinzufügen"

2. Nach dem Hinzufügen, rechtsklick auf die Datei und "Bausteine aus Quelle generieren" auswählen.

3. Die PLC-Variablen wurden damit erfolgreich generiert. Das Projekt ist nun für die Verwendung mit ConveyLinxAi2 vorbereitet.





### 3. Hinzufügen eines Controllers

Wählen Sie die Netzsicht aus und öffnen Sie den Hardwarekatalog. Der korrekte Controller wird der Netzübersicht aus dem folgenden Pfad hinzugefügt werden: "Hardwarekatalog"  $\rightarrow$  "Weitere Feldgeräte"  $\rightarrow$  "PROFINET IO"  $\rightarrow$  "I/O"  $\rightarrow$  "Industrial Software Co."  $\rightarrow$  "ConveyLinx"  $\rightarrow$  "**Conveyor Control with standard configuration**". Fügen Sie **ConveyLinx Ai** hinzu. Es ist wichtig, dass exakt dieser Controller unter exakt dem angegebenen Pfad hinzugefügt wird!



Durch die Autokonfiguration wurde der Profinet Name des Controller bereits nach folgendem Syntax geändert: conveylinxzpa-X-Y. Dabei steht X für das vorletzte Byte der IP-Adresse des Controllers und Y für das letzte Byte der IP-Adresse. In diesem Beispiel lautet die IP Adresse des Controllers **192.168.0.20**. Damit lautet der Profinet Name: **conveylinxzpa-0-20**. Dieser Name ist zwingend im Projekt zu verwenden und kann nicht geändert werden. Passen Sie nach dem Hinzufügen des Controllers den Profinet Namen und die IP-Adresse im TIA Portal an.



Dokumentation + (	Geräte & Netze			
Vernetzen	bindungen HMI-Verl	bindung 💌 뿐 🖽	Topologie	sicht Netzsicht
PLC_1 CPU 1511C-1 PN	PLC_1.PROFINET	nveylinxzpa nveyLinx Ai		
Conveylinxzpa-0-2	0 [ConveyLinx Ai]	Systemkonstanten Tex	te	
<ul> <li>Allgemein</li> <li>Kataloginform</li> <li>PROFINET-Schnit</li> <li>Allgemein</li> <li>Ethernet-Adre</li> <li>Erweiterte Op</li> <li>Schnittste</li> <li>Echtzeit-Ei</li> <li>Port 1 [X1]</li> <li>Port 2 [X1]</li> <li>HW-Kennung</li> </ul>	nation tstelle [X1] essen ptionen llen-Optionen instellungen P1 R] P2 R]	IP-Protokoll IP-Adresse: Subnetzmaske: Router-Adresse: PROFINET	Neues Subnetz hinzufügen         192.168.0.20         255.255.255.0         Router verwenden         0.0.0.0	
Identification & I HW-Kennung	Maintenance	PROFINE T-Gerätename : Konvertierter Name : Gerätenummer :	PROFINET-Gerätename automatise conveylinxzpa-0-20 conveylinxzpa-0-20 1 OI	ch generieren

Weisen Sie nun die spezifischen Datentypen, welche durch die UDT erzeugt wurden, jedem Controller zu. Dazu benötigen Sie die E/A Adressen der Controller. In der Gerätesicht können die jeweiligen Anfangsadressen eingesehen werden.



Dokumentation   Nicht gruppie	erte Geräte → conveylinxzpa-0-2	20 [ConveyLinx Ai]			_₽≡×
		<b>#</b> 1	opologiesich	t 🔒 Netzsicht	Gerätesicht
🔐 conveylinxzpa-0-20 [ConveyLi 🔻	) 🖽 🕅 🔏 🖽 🛄 🍳 ±		Geräte	übersicht	
CONVERTING AND	Convertinx ats			Modul ▼ conveylinxzpa-0-20 ▶ Interface virtual input modul virtual output mod	Baugr            0         0            ie 64 byt         0         1           ule 64 byt         0         2
			~		
virtual input module 64 byte 1	[virtual input module 64 byte]				
Allgemein IO-Variablen	Systemkonstanten Text	e Liger	ischarten		Juose
Allgemein	E/A-Adressen				
E/A-Adressen HW-Kennung	Eingangsadressen				
	Anfanceadrosses	124	_		
	Endadresse:	187			
	Organisations baustein:	(Automatische Aktualisierun			
4	Prozessabbild:	Automatische Aktualisierung			

In diesem Beispiel lauten die Anfangsadresse des Eingangscontrollers 124 und die Anfangsadresse des Ausgangscontrollers 126.

Fügen Sie eine neue Variablentabelle hinzu: "Projektnavigation"  $\rightarrow$  "[Name der SPS]"  $\rightarrow$  "PLC-Variablen"  $\rightarrow$  "Neue Variablentabelle hinzufügen".

Fügen Sie der Tabelle für jeden Controller eine Eingangsvariable und eine Ausgangsvariable hinzu. Die Namen sind frei wählbar. Der zu verwendende Datentyp lautet "CLAiZPA\_In" für jeden Eingangscontroller und "CLAiZPA\_OUT" für jeden Ausgangscontroller. In der dritten Spalte wird jeweils die zugehörige, zuvor abgefragte Anfangsadresse eingetragen. Achten Sie unbedingt auf die korrekte Zuweisung des Operanden Kennzeichnung (Ausgang=Q bzw. A und Eingang = I bzw. E). Das Anfangsbit ist immer "0". In diesem Beispiel stellt sich das wie folgt dar.



	Projektnavigation 0		Do	kume	ent	ation  PLC_1 [CPU 1511C-1	I PN] → PLC-Variabl	en 🕨 ConveyLin						
	Geräte													
6	ă 🔳	1												
Ĩ.			Conv	ey	eyLinxAi2									
nier	Dokumentation	^			Na	ame	Datentyp	Adresse						
E	💣 Neues Gerät hinzufügen		1	-	€	Modul1_IN	"CLXAiZPA_IN"	%I124.0						
a d	🛗 Geräte & Netze		2	-	•	Modul1_OUT	"CLXAIZPA_OUT"	%Q126.0						
2	PLC_1 [CPU 1511C-1 PN]		3			<hinzufügen></hinzufügen>								
5	🕎 Gerätekonfiguration													
Ч	🛂 Online & Diagnose													
	🎬 Parameter													
	🕨 🔙 Programmbausteine	=												
	🕨 🚂 Technologieobjekte													
	🕨 🔚 Externe Quellen													
	🔻 🔙 PLC-Variablen													
	🍇 Alle Variablen anzeigen													
	📑 Neue Variablentabelle hinzufügen													
	🍯 Standard-Variablentabelle [66]													
	🖳 ConveyLinxAi2 [2]													
	PLC-Datentypen													
	🕨 詞 Beobachtungs- und Forcetabellen													
	🕨 🙀 Online-Sicherungen													
	🕨 🔄 Traces													
	🕨 🏢 Geräte-Proxy-Daten													
	🔤 Programminformationen			<										

Der Controller ist nun korrekt eingebunden und kann im Programm verwendet werden.

#### 4. Beispielprogramm

Im unten gezeigten Beispielprogramm wird gezeigt, wie mit den neu hinzugefügten Variablen gearbeitet werden kann. "Modul1\_IN" und "Modul1\_OUT" sind Platzhalter für alle Register ab der angegeben Startadresse. Im Beispiel wird der linke digitale Eingang des Controllers abgefragt. Sollte dieser HIGH sein, wird die Downstream Zone akkumuliert. Sollte dieser LOW sein, wird die Downstream Zone nicht akkumuliert. Die Beschreibung aller Register ist diesem Dokument angehängt.



Totally Integra Automation Pe	ated ortal										
CLXAIZPA_I	N										
CLXAiZPA_IN Eig	enschaften										
Allgemein	CLVAIZDA IN		Nummer	2		D an		UDT		Smatha	
Nummerierung	CLAAIZPA_IN		Nummer	4		тур		001		spracie	
Information			1								
Titel			Autor			Kommentai	r			Familie	
Version			Anwenderdefi-								
Name		Datenty	p [	Defaultwert	Erre aus UA	ichbar S HMI/OPC e t a b c t t	Schr eib- bar aus HMI/ OPC UA	Sichtbar in HMI En- gineering	Einstell- wert	Kommentar	
StateUpstream	nZoneInverce	Byte	1	6#0	Tru	, I	True	False	False	Zone status when the con site to configured direction same meaning as in "State	iveyor is running in oppo- in .The values have the
StateUpstream	nZone	Byte	1	6#0	True	, 1	True	False	False	Empty = 1 /Empty Motor R Full Running = 4 / Full Sto	un = 2 /Empty Sending = 3 / pped = 5 / Empty but Accu-
StateDownstre	eamZoneInverce	Byte	1	16#0	True	• 1	True	False	False	Zone status when the con site to configured directio	iveyor is running in oppo- in .The values have the
StateDownstre	eamZone	Byte	1	6#0	True	• 1	<b>Frue</b>	False	False	Empty = 1 /Empty Motor R Full Running = 4 / Full Sto	un = 2 /Empty Sending = 3 / pped = 5 / Empty but Accu-
ArrivalCounter	rUpstrea mZone	Int	0	)	True	• 1	True	False	False	Every time a product arriv this counter is incremented	es on the Upstream zone
Disarriva ICourt	nterUpstre am Zone	Int	C	)	True	e  1	True	False	False	Every time a product leave	es the Upstream zone this
ArrivalCounter	rDownstreamZone	Int		)	True	• 1	True	False	False	Every time a product arriv this counter is incremented	es on the Downstream zone ed
Disarriva Koun Zone	nterDownstream-	Int	C	)	True	י י	True	False	False	Every time a product leave this counter is incremented	es the Downstream zone
<ul> <li>Diagnostic</li> </ul>		Struct			True	• 1	True	False	False	32 bit diagnostic field . W	hen bits are set the error is
LeftMDR_O	verheat	Bool	f	alse	Tru	• 1	[rue	False	False	active . The Left MDR temperature Celsius	e has exceeded 105 degrees
LeftMDR_M	laxTorque	Bool	f	alse	True	· 1	<b>Frue</b>	False	False	The Left MDR is running v put	vith maximum torque out-
LeftMDR_SI	hort	Bool	f	alse	Tru	1	True	False	False	There is a short circuit on	the Left MDR
LeftMDR_N	otConn	Bool	f	alse	True	• 1	True	False	False	The Left MDR is not conne	ected
LeftMDR_O	verload	Bool	f	alse	True	ין י	Frue	False	False	The Left MDR has been ow been running for 20s in S	verloaded - the motor has talled.
LeftMDR_S1	talled	Bool	f	alse	True	• 1	True	False	False	The Left MDR has stalled - than 10% of the selected	this means its speed is less speed
Le ftM DR_Ba	adHall	Bool	f	alse	True	• 1	True	False	False	The Left MDR has a Hall E	fect Sensor error
LeftMDR_N	otUsed	Bool	1	alse	Tru		True	False	False	The Left MDR is not used	
Reserved_fe	or_Modbus	Bool	1	alse	True		True	False	False		
Reserved_1	A	Bool		alse	True		True	False	False	The sum of the module p	ower supply voltage + the
overvolug										MDR - generated voltage	has exceeded 30 volts
LeftMDR_A	nyErr	Bool	f	alse	True	• 1	True	False	False	A general error on the Let	t MDR.
Connection	ISNOTOK	Bool		alse	True		True	False	False	Ine Ethernet connections	are not ok .
LeftSensLo	wGain	Bool	f	alse	True		True	False	False	Left sensor error	stream zone
LowVoltage	e	Bool	ſ	alse	True	1	True	False	False	Module power supply is le	ess than 18 Volts
RightMDR_	Overheat	Bool	f	alse	True	• 1	Frue	False	False	The Right MDR temperatu grees Celsius	re has exceeded 105 de-
RightMDR_	MaxTorque	Bool	f	alse	True	1	[rue	False	False	The Right MDR is running put	with maximum torque out-
N ghtMDR_	Short	Bool	1	aise	True		True	False	False	The Bight MDB is not circuit on	the Right MUR
RightMDR_	Overload	Bool	f	alse	True	1	True	False	False	The Right MDR has been of been running for 20s in S	overloaded - the motor has talled.
RightMDR_	Stalled	Bool	f	alse	True	• 1	[rue	False	False	The Right MDR has stalled less than 10% of the selec	I - this means its speed is ted speed
RightMDR_	BadHall	Bool	!	alse	Tru		rue	False	False	The Right MDR has a Hall	Efect Sensor error
RightMDR_	Notosed	Bool	1	ake	True		True	False	False	The rught MDR is not used	4
Reserved 2	2	Bool	f	alse	True		True	False	False		
OverVoltag	e1	Bool	f	alse	True	1	True	False	False	The sum of the module p MDR -generated voltage h	ower supply voltage + the has exceeded 30 volts
RightMDR_	AnyErr	Bool	f	alse	True		Frue Frue	False	False	A general error on the Rig	ht MDR.
Downstream	mlamErr	Bool	1 f	ake	True		True	False	False	Jam error is present on Dr	winstream zone
RightSensi	owGain	Bool	4	alse	True		True	False	False	Right sensor error	Annau cann 2010
LowVoltage	e1	Bool	f	alse	True		True	False	False	Module power supply is la	ess than 18 Volts
TrackingUpstr	eamZone	DWord	1	16#0	True	1	True	False	False	The Tracking data of the p zone	product currently on this
TrackingDown	streamZone	DWord	1	6#0	True	• 1	True	False	False	The Tracking data of the p zone	product currently on this

Totally Integrated Automation Portal							
Name	Datentyp	Defaultwert	Erreichbar aus HMI/OPC UA	Schr eib- bar aus HMI/ OPC UA	Sichtbar in HMI En- gineering	Einstell- wert	Kommentar
Re leas eCounterUpstreamZone	Int	0	True	True	False	False	Same register as is read in the CLXZPA_OUT in- stance.Used to confirm the ReleaseCounter
ReleaseCounterDownstream-	Int	0	True	True	False	False	Same register as is read in the CLXZPA_OUT in-
ModuleDischargeTracking	DWord	16#0	True	True	False	False	Tracking data of a product that has just been dis- charged to a non-ConveyLinx part of a conveyor , when the module is operating in default direction
ModuleDischargeTrackingIn- verce	DWord	16#0	True	True	False	False	Tracking data of a product that has just been dis- charged to a non-ConveyLinx part of a conveyor, when the module is operating in opposite to default direction
	Struct		True	True	False	False	All sensor inputs
Reserved[0]	Bool	false	True	True	False	False	
Reserved[1]	Bool	false	True	True	False	False	
Reserved[3]	Bool	false	True	True	False	False	
Reserved[4]	Bool	false	True	True	False	False	
Reserved[5]	Bool	false	True	True	False	False	
Reserved[6]	Bool	false	True	True	False	False	This bit to order on a Dan condu
Heartbeat	Bool	false	True	True	False	False	This bit toggles every 2 seconds .
Reserved[9]	Bool	false	True	True	False	False	cert sensor por c state (rm2)
RightPin2	Bool	false	True	True	False	False	Right sensor port state (Pin2)
Reserved[11]	Bool	false	True	True	False	False	
LeftSensor	Bool	false	True	True	False	False	Left sensor port state (Pin4)
Reserved[13]	Bool	false	True	True	False	False	Right sensor port state (Pin4)
Reserved[15]	Bool	false	True	True	False	False	ngitt sensor port state (may
Reserved	Word	16#0	True	True	False	False	
<ul> <li>Convey_stop_status</li> </ul>	Struct		True	True	False	False	Status of ConveyStop
Reserved0	Bool	false	True	True	False	False	
Reserved1	Bool	false	True	True	False	False	Change of the state of the stat
StopActiveCommandPLC Reserved3	Bool	false	True	True	False	False	Stop active due to stop command from the PLC
Reserved4	Bool	false	True	True	False	False	
Reserved5	Bool	false	True	True	False	False	
Reserved6	Bool	false	True	True	False	False	
Reserved7	Bool	false	True	True	False	False	
ReservedB	Bool	fake	True	True	False	False	
Reserved10	Bool	false	True	True	False	False	
Reserved11	Bool	false	True	True	False	False	
Reserved12	Bool	false	True	True	False	False	
StopActiveO therModule	Bool	false	True	True	False	False	Stop condition is active on a module in the Convey- Stop group
StopActiveLostConn	800	Taise	True	True	False	False	stop is active due to a loss of communication connec- tion
StopActiveLostPLC	Bool	false	True	True	False	False	Stop active due to a loss of connection with the PLC
▼ Future	Array[2131] of word		True	True	False	False	
Future[21]	Word	16#0	True	True	False	False	
Future[23]	Word	16#0	True	True	False	False	
Future[24]	Word	16#0	True	True	False	False	
Future[25]	Word	16#0	True	True	False	False	
Future[26]	Word	16#0	True	True	False	False	
Future[27]	Word	16#0	True	True	False	False	
Future[29]	Word	16#0	True	True	False	False	
Future[30]	Word	16#0	True	True	False	False	
Future[31]	Word	16#0	True	True	False	False	

Totally Integrated Automation Portal									
CLXAIZPA OUT									
CLXAiZPA_OUT Eigenschaften									
Allgemein			-						
Name CLXAiZPA_OUT	Nummer	1	Тур		UDT		Sprache		
Information									
Titel	Autor		Kommen	tar			Familie		
Version	Anwende	erdefi-	ĺ						
	nierte ID								
Name	Datentyp	Defaultwert	Erreichbar aus HMI/OPC UA	Schr eib- bar aus HMI/ OPC	Sichtbar in HMI En- gineering	Einstell- wert	Kommentar		
Induct Tracking On Upstream Zone	DWord	16#0	True	UA True	False	False	Writes the tracking data of the product currently on the zone. The Release counter of the zone must be incremented by 1		
InductTrackingOnDownstream- Zone	DWord	16#0	True	True	False	False	Writes the tracking data of the product currently on the zone .The Release counter of the zone must be		
- AccumulateControlUpstream	Struct		True	Tore	False	False	Incremented by 1.		
Accumulatecontrolopstream	Baal	fals -	True	T	Falco	Falco	Assumulates the Herteren as a solution to the		
AccumUpstreamToThisZone	600	raise	Trué	rue	raise	raise	zone.Useful in Merge/Divertoperations		
FakeConfirm	Bool	false	True	True	False	False	Fake confirmation bit . Useful for Divert operations . Please check documentation for more information .		
Reserved[2]	Bool	false	True	True	False	False			
Reserved[3]	Bool	false	True	True	False	False			
Reserved[4]	Bool	false	True	True	False	False			
Reserved[5]	Bool	false	True	True	False	False			
Reserved[6]	Bool	false	True	True	False	False			
Accumulate	Bool	false	True	True	False	False	Accumulates this zone of this Conveyl inx Ai module		
Reserved[9]	Bool	false	True	True	False	False	Accumulates this zone of this conveyence of module		
Reserved[10]	Bool	false	True	True	False	False			
Reserved[11]	Bool	false	True	True	False	False			
Reserved[12]	Bool	false	True	True	False	False			
Reserved[13]	Bool	false	True	True	False	False			
Reserved[14]	Bool	false	True	True	False	False			
Reserved[15]	Bool	false	True	True	False	False			
<ul> <li>AccumulateControlDownstream</li> </ul>	Struct		True	True	False	False			
AccumUpstreamToThisZone	Bool	false	True	True	False	False	Accumulates the Upstream zone relative to this zone .Useful in Merge/Divert operations		
FakeConfirm	Bool	false	True	True	False	False	Please check documentation for more information .		
Reserved[3]	Bool	false	True	True	False	False			
Reserved[4]	Bool	false	True	True	False	False			
Reserved[5]	Bool	false	True	True	False	False			
Reserved[6]	Bool	false	True	True	False	False			
Reserved[7]	Bool	false	True	True	False	False			
Accumulate	Bool	false	True	True	False	False	Accumulates this zone of this ConveyLinx Ai module		
Reserved[9]	Bool	false	True	True	False	False			
Reserved[10]	Bool	false	True	True	False	False			
Reserved[11]	Bool	false	Trué	True	False	False			
Reserved[12]	Bool	false	True	True	False	False			
Reserved[14]	Bool	false	True	True	False	False			
Reserved[15]	Bool	false	True	True	False	False			
SpeedLeftMDR	Int	0	True	True	False	False	The speed of the MDR in m/s*1000 (or in shaft RPM *10 for PGD). The allowed values depend on the Speed code of the MDR		
S peed RightMD R	Int	0	True	True	False	False	The speed of the MDR in m/s*1000 (or in shaft RPM*10 for PGD). The allowed values depend on the Speed of of the MDR.		
ReleaseControlUpstream	Int	0	True	True	False	False	Changing the value causes the Upstreamzone to re- lease the current product. Even if Accumulation is		
ReleaseControlDownstream	Int	0	True	True	False	False	Changing the value causes the Downstream zone to release the current product. Even if Accumulation is set for this zone. the current product is released		
InductControlState	Word	16#0	True	True	False	False	Used as a "Wake up" signal. If '4' is written the Zone will attempt to accept product. If 1 is written the zone will stop accepting		
DishargeControlState	Word	16#0	True	True	False	False	Used as a "Lane full" signal .Set 5 to cause the zone to accumulate product here . Set 1 to allow the zone to release the product here .		
ModuleInductTrackingOnInduct Side	DWord	16#0	True	True	False	False	When the conveyor is running in configured direc- tion, writing Tracking data here will cause the next product to appear on the zone to have this tracking data assigned.		



Totally Integrated Automation Portal								
Name		Datentyp	Defaultwert	Erreichbar aus HMI/OPC UA	Schr eib- bar aus HMI/ OPC UA	Sichtbar in HMI En- gineering	Einstell- wert	Kommentar
ModuleInductTrackingOn geSide	Dishar-	DWord	16#0	True	True	False	False	When the conveyor is running in opposite to config- ured direction, writing Tracking data here will cause the next product to appear on the zone to have this tracking data assigned.
ClearMotorError		Word	16#0	True	True	False	False	Writing '1' to this field clears the MDR error .There needs to be a transition from 0 to 1 in order to clear the error .
Reserved		Word	16#0	True	True	False	False	
Reserved_1		Word	16#0	True	True	False	False	
Convey_stop_control		Word	16#0	True	True	False	False	Writing '1' causes the Stop group to go into STOP state . Writing '2' clears the STOP state. Transition 0 - 2 is needed to clear the Stop
JamClearUpstream		Word	16#0	True	True	False	False	Transition of this value from '0' to '1' clears the JAM condition on the zone
JamClearDownstream		Word	16#0	True	True	False	False	Transition of this value from '0' to '1' clears the JAM condition on the zone
GlobalDirectionControlUp	os tre am	Word	16#0	True	True	False	False	Used to change direction of flow or accumulation mode for a continuous group of zones beginning with the local zone .
Global Direction Control Do stream	own-	Word	16#0	True	True	False	False	Used to change direction of flow or accumulation mode for a continuous group of zones beginning with the local zone .
✓ Future	-	Array[2431] of Word		True	True	False	False	
Future[24]		Word	16#0	True	True	False	False	
Future[25]		Word	16#0	True	True	False	False	
Future[26]		Word	16#0	True	True	False	False	
Future[27]		Word	16#0	True	True	False	False	
Future[28]		Word	16#0	True	True	False	False	
Future[29]		Word	16#0	True	True	False	False	
Future[30]		Word	16#0	True	True	False	False	
Future[31]		Word	16#0	True	True	False	False	







D-A-CH:

Robotunits GmbH Dr. Walter Zumtobel Str. 2 A-6850 Dornbirn T +43/5572/22000 200 austria@robotunits.com www.robotunits.com

#### Italien:

Robotunits Italia S.r.l. Z.l. di Cima Gogna 68 32041 Auronzo di Cadore (BL) T +39/0435/409928 info.ita1@robotunits.com www.robotunits.com

#### USA:

Robotunits INC. 8 Corporate Drive Cranbury, NJ 08512 T +1/732/438 0500 info.usa1@robotunits.com www.robotunits.com

#### Australien:

Robotunits Pty Ltd. 23 Barry Road Tullamarine VIC 3043 T +61/3/9334 5182 info.aus1@robotunits.com www.robotunits.com